


.910gia a la parte inferior de su retire la guia y de torma 4. Después de terminar,


DESDE ARRIBA HASTA ABAJO SIEMPRE CORTE SU BIGOTE

boqua volver a acortar el bigote). Fublece cou la posicion mas larga (siembre 3. Instale la guía ajustable sobre las cuchillas.

> natural del pelo. dirección del crecimiento

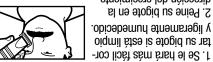

COMO CORTAR SU BIGOTE

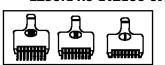

retire el accesorio. 3. Después de terminar, apague el aparato y

usando pequenos movimientos uniformes. 2. Sostenga la cortadora recta y corte el pelo dnia encima de la cuchilla de acabado. lograr un recorte neto y preciso. Instale la 1. Las guias para la quijada le permitirán

AGALIUD AJ RAJAUÐI

deseado.

acortando su barba hasta conseguir el tamaño sgis y ,(sbaglud 3/f) mm 3.5f o (sbaglud 8/£) un largo de recorte mas corto, como 9.5 mm 4. Si desea un recorte aún más corto, escoja pelo. El recorte resultaria demasiado corto.

dirección contraria al crecimiento natural del quijada. Munca corte en



las patillas hasta la barejos y suaves, desde parda con movimientos 3. Empiece a cortar su

boqus volver a acortar la barba. más largo (16 mm) para empezar. Siempre corte. Le recomendamos que utilice el ajuste 2. Instale la guia encima de la cuchilla de pulgada) a 16 mm (5/8 pulgada). p bosicioues due colla ei peio de 3 mm (1/8

1. Su cortadora incluye una guia ajustable con EL RECORTE

13. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel cadmium or Nickel Metal Hydride) batteries.

14. Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit

15. Never dispose of batteries in fire, except under conditions of controlled incineration. Failure to observe this precaution may result in an explosion. Never attempt to recharge primary batteries as this may cause leakage, fire, or explosion.

USER MAINTENANCE INSTRUCTIONS

TAKING CARE OF YOUR TRIMMER **OILING THE BLADES**

About once a month you should oil the trimmer blade. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are pointed downward. Spread one drop of oil across the blades, then turn the trimmer off and wipe away the excess oil with a soft cloth.

Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.) KEEP OIL OUT OF REACH OF CHILDREN.



mejilla, a las patillas y a la linea de nacimiento lado del rostro. Siga dando torma al area de la is duljada y subiendo hacia la oreja, en cada 3. De forma a su barba empezando debajo de

darle torma. miento natural del pelo antes de empezar a 2. Peine la barba en la dirección del creci-



ligeramente humedecida. rar la barba si esta limpia y 1. Se le hará más fácil cor-

EL CONTORNEO

COMO CORTAR SU BARBA



moje). Esto evitará cortar demasiado pelo. ligeramente su barba antes de recortaria (no la Para lograr resultados óptimos, humedezca vez por semana.

mantener su aspecto, usando la cortadora una de dar forma a su barba o a su bigote, debera couvieue, pida consejo a un barbero. Después esta seguro del tipo de barba o bigote que le 3. El espesor de su barba o de su bigote. Si no parba o de su bigote.

2. La forma del crecimiento natural de su

El tipo de barba o de bigote que más conviene

BARBAS Y BIGOTES

usara due carce emiriendo un cuasquido. Fuganche el Juego de cuchillas en su lugar Introduzca la lengüeta en la hendidura. Hay una lengüeta en la parte inferior del

hendidura en la parte posterior.

NOIDALATEN

bara desencajarlas.

adelante y empuje las cuchillas hacia arriba Sostenga el aparato con el interruptor

1. La forma y el tamaño de su rostro. s nus belzons depende de:

*Requiere 2 pilas AA (no incluidas) Le aconsejamos que Rotou de euceudido/abadado

nego de cuchillas.

Si observa el aparato desde arriba, verá una

apagario, deslicelo nacia atras. encendido/apagado nacia las cuchillas. Para

> Para encender el aparato, deslice el botón de BOTÓN DE ENCENDIDO/APAGADO

Asegúrese de que el aparato esté apagado.

extraibles, para facilitar el mantenimiento, la

limpieza, y el reemplazo de las mismas.

2n cortadora està equipada con cuchillas

bropósito para el cual fue disenado: cortar la

Para seguir distrutando de su aparato durante

cncuilise siembre esten cambiadas o atiladas ai

recibir un cuidado muy especial. Limpie las

cou brecision para un uso específico, y deben

res cocuiles de su abarato tueron disenadas

ndiice biiga gicgiiuga' iga chaiea aou iuga qhuaqeuga:

LIMPIEZA DE LAS CUCHILLAS

mucho tiempo, utilicelo únicamente con el

REMOCIÓN DE LAS CUCHILLAS

oaroa y ei bigote.

mismo tiempo.

aceite sobre las cuchillas, apague el aparato y ajustar las cuchillas. Asegürese de que ambas al revés y enciendalo. Coloque una gota de Tenga cuidado cuando sea necesario cambiar o eucima de un periodico. Sostenga el aparato próximo uso para proteger las cuchillas. una vez al mes. Para no ensuciar, haga esto de limpieza provisto. Guarde el aparato hasta el Lubrique las cuchillas aproximadamente cncuilise desbues de cada uso con el cepillo

LUBRICACION SU RECORTADORA **AMANTENIMIENTO DE**

DEL ALCANCE DE LOS NIÑOS.

de por vida. Mantenga el aceite fuera

las piezas del motor, las cuales son lubricadas

limpie el exceso de aceite con un pano suave.

danar el motor. Tampoco no intente lubricar

aparato mas de lo necesario. Esto podria

No use demasiado aceite y no lubrique el

OTNAIMINATION INSTRUCCIONES DE

pérdida de electrolito, incendio o explosión. recargable. Esto podria presentar un riesgo de una explosión. Nunca intente cargar una pila no ante incineración controlada. Esto podría causar 15. Nunca fire las pilas al fuego, excepto mediciccnite las pilas.

boarian provocar un cortocircuito. Nunca cortooudiusi, lejos de los objetos de metal los cuales 14. Guarde las pilas nuevas en su paquete (carbón-zinc) o pilas recargables (NiCd o NiMH). 13. No junte pilas alcalinas con pilas regulares 12. No junte pilas nuevas con pilas usadas.

7 J. Ketire las pilas usadas sin demora. qurante un largo periodo de tiempo. 10. Retire las pilas si no va a usar el aparato

gi instalar la(s) pila(s). 9. Siempre respete los signos de polaridad (+/-)

pila(s) antes de instalar ésta(s). 8. Limpie los contactos del aparato y los de la(s)

7. Cambie todas las pilas al mismo tiempo. la potencia indicada para uso con este aparato. 6. No utilice pilas que no sean del tamaño o de

hacia abajo (OFF). 5. Para apagar el aparato, deslice el interruptor

tor hacia arriba (OV). 4. Para encender el aparato, deslice el interrupbija(s); empujando hasta que haga clic.

3. Cierre la cubierta del compartimiento de la(s) ceuieugo cnigago de no gopiar las patas de

bolgudad. Introduzca el polo negativo primero, 2. Instale dos pilas AA, respetando los signos de bijs(s) yscis spsjo bsis spulio.

1. Deslice la cubierta del compartimiento de la(s)

INSTRUCCIONES DE OPERACIÓN **SOLAMENTE**

PARA USO DOMESTICO INSTRUCCIONES **GUARDE ESTAS**


SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY **OPERATING INSTRUCTIONS**

- 1. Remove the battery compartment cover by pushing in and down toward the bottom of the
- 2. Align the two AA batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips, insert the negative end of each battery first so it will slip easily into position.
- 3. Return the battery cover to its original position by pushing it in and up until you hear a small click as it locks into place.
- 4. To use your trimmer, push ON/OFF switch upwards to ON position.
- 5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
- 6. Always purchase the correct size and grade of battery most suitable for the intended use.
- 7. Replace all batteries of a set at the same
- 8. Clean the battery contacts and also those of the devise prior to battery installation. 9. Ensure the batteries are installed correctly
- with regard to polarity (+ and -). 10. Remove batteries from equipment, which is
- not to be used for an extended period of time. 11. Remove used batteries promptly.
- 12. Do not mix old and new batteries.

ON/OFF SWITCH

To operate, simply push slide toward blade; to stop, push slide away from blade.

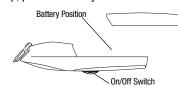

*Requires 2 AA batteries (not included). We recommend using alkaline batteries in your trimmer because they last longer.

BLADE CARE

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take a cleaning brush and brush away any loose hair that has collected in the blades. Then store the trimmer to protect the blades until the next use.

Be especially careful when changing or adjusting blades. When you have your trimmer serviced, be sure that both blades are sharpened or replaced at the same time. To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer – to trim your beard

REMOVING BLADE SET

and mustache.

This trimmer comes with a detachable blade set; which makes maintenance easy. To remove the blade set:

Make sure the trimmer is in the off position

 With the power switch facing you, press the blade on the teeth and in direction away from you until they pop out of the housing

TO REPLACE THE BLADE SET

- Looking at the trimmer from above you will see a notch at the back of the trimmer.
- There is a tab on the blade set on the bottom, opposite the blades

Position that tab so that it fits into the notch inside the trimmer head

Push the blade set down onto the trimmer head until it snaps into place.

GROWING A BEARD AND MUSTACHE

There are three key factors that will determine which beard or mustache style is best for you:

- 1. The shape and dimensions of your face.
- 2. The natural growth of your beard/mustache.
- 3. The thickness of your beard/mustache. If you are unsure about the type of beard or mustache that would most suit your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled. it is essential that you maintain its appearance. To do this, use your trimmer to trim your beard/mustache weekly.

For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trimmer from removing more hair than desired.

TYPES OF BEARDS/MUSTACHES



GETTING STARTED:

OUTLINING YOUR BEARD

1. It is always best to begin with a clean, slightly damp beard.

2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.

Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your






NOW YOU'RE READY TO TRIM YOUR BEARD

- 1. Your trimmer adjusts to five positions so you can have a beard length from 1/8" (shortest) to 5/8" (longest).
- 2. To use the 5-position comb, slide the unit over the trimmer blades and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting (5/8"). (You can always go back and make your beard a little shorter.)
- 3. Begin trimming your beard using smooth. even strokes. Start with your sideburns and work downward toward your
- chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short.)
- 4. If you decide you want a closer trim, you can now adjust the 5-position comb attachment to a shorter setting (such as 1/2" or 3/8") and go over your beard again until you achieve the desired length.

BLENDING THE JAWLINE

- 1. The three jawline attachments will help vou to achieve a neat, finished trim under your chin. To use one of the attachments, press it down over the trimmer blades until it clicks into position.
- 2. Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.

3. After your beard is blended, turn off the trimmer and remove the attachment by gently pulling up on tab.

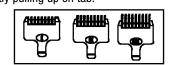

TO TRIM YOUR MUSTACHE

- 1. For best results, start with a clean, slightly damp mustache.
- 2. Comb through your mustache in the direction
- 3. Place the 5-position comb over the trimmer blades and snap it into position. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.)

ALWAYS TRIM YOUR MUSTACHE FROM THE TOP DOWN

4. After your mustache has been trimmed to the desired length, remove the 5-position comb and, using the blades only, define the outline of the bottom of your mustache.





ELÉFONO ()	(eu caso de pre	(ejun6
	ODATS3	CÓDIGO POSTAL
DIRECCIÓN		
NOMBRE		

Para evitar demoras, por tavor escriba ciaramente.

de los EE.UU. La entrega demora entre 4 y 6 semanas. cambio sin previo aviso. Precios validos unicamente para envios en la parte continental ros brecios incluyen gastos de manejo y envio. Los precios estan sujetos a East Windsor, NJ 08520-9730

de \$10.00; de lo contrario se sumará \$2.00 al pedido por gastos administrativos. dinero en efectivo, estampillas, ni pedidos contra reembolso. Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas. Se requiere un pedido minimo Favor de incluir un cheque o giro postal al nombre de Conair. Sentimos no poder aceptar

IATOT			
esto a la venta	dw _{l*}		
Subtotal			
•			
	09.3\$	WOT1-WALE	guías para la quijada

	09.9\$	BLD-170W	Juego de cuchillas
	\$2.25	COMB-170W	Senoiciones posiciones
	09 9\$	WOT1-WALE	shejirin el exed seìrin 8

esta fecha y le informaremos de cualquier cambio de precio. Precios válidos hasta el 1st de junio del 2012. Aceptaremos los pedidos enviados después de

FORMULARIO DE PEDIDO - PARTES DE REPUESTO Y ACCESORIOS

MODEL GMT7CS



5-position

attachment comb

LIMITED TWO YEAR WARRANTY Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

Service Department 150 Milford Road

Conair Corporation

JAI∪I

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES. INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSE-**OUENTIAL DAMAGES FOR BREACH OF THIS** OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary

from state to state.

Please register this product at www.conair.com/registration

Service Center

11PG126722

Conair Corporation Service Department 7475 North Glen Harbor Blvd. Glendale, AZ 85307

©2012 Conair Corporation 150 Milford Road, East Windsor, NJ 08520 7475 North Glen Harbor Blvd., Glendale, AZ 85307

IB-11089

IB-11089

W071-WALE

COMB-170W

MG/L-CITE

BLD-175W

COMB-170W

3JAW-170W

7475 North Glen Harbor Blvd., Glendale, AZ 85307 150 Milford Road, East Windsor, NJ 08520 ©2012 Conair Corporation

> Glendale, AZ 85307 7475 North Glen Harbor Blvd. Service Department Conair Corporation Centro de servicio

> varian de un Estado a otro.

11PG126722

www.conair.com/registration Para registrar su producto, visitenos en:

consecnentes, de modo que las limitaciones limitación de daños especiales, incidentales o Algunos Estados no permiten la exclusión o OTRA GARANTIA, EXPRESA O IMPLICITA. AL INCUMPLIMIENTO DE ESTA O CUALQUIER CIAL, INCIDENTAL O CONSECUENTE DEBIDO NINGUN CASO, POR NINGUN DANO ESPE-CONAIR NO SERÁ RESPONSABLE, EN

mencionadas pueden no regir para usted.

de una garantia implicita, de modo que las uo bermiten limitaciones sobre la duración SENTE GARANTÍA ESCRITA. Algunos Estados LIMITADAS POR LOS 24 MESES DE LA PRE-PARA UN PROPOSITO ESPECIFICO, ESTARAN IMPLÍCITA DE COMERCIABILIDAD Y APTITUD ENDO PERO NO LIMITADAS A LA GARANTÍA RESPONSABILIDAD IMPLICITAS, INCLUY-О ИОІОРІЕВ СЕВРИТІР, ОВІІСЬСІОИ О

garantía será de 24 meses a partir de la fecha susencia del recibo de compra, el periodo de 0937 para recibir instrucciones de envio. En de compra y deben llamar al 1-800-366de California solo necesitan dar una prueba bor gastos de manejo y envio. Los residentes combra y un cheque o giro postal de US\$3.00 indicado a continuación, junto con su recibo de rantía, regrese su aparato al Centro de Servicio Para obtener servicio técnico bajo esta gadefectos de materiales o tabricación. s partir de la fecha de compra si presentara sparato sin cargo por un periodo de 24 meses Conair reparará o remplazará (a su opción) su



cou 2 bosiciones

Guía ajustable

CORTADORA DE BARBA/BIGOTE MODELO GMT7CS

CHOPPER

TRIMMER REPLACEMENT PARTS & ACCESSORIES ORDER FORM

Pricing in effect through June 1, 2012. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Trimmer Blade	BLD-170W	\$6.50		
5 Position Attachment Comb	COMB-170W	\$2.25		
3 Jawline Combs	3JAW-170W	\$5.50		

Subtotal	
*Sales Tax	
TOTAL	

Mail to:

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) CT, IL, AZ, and PA residents should add applicable state sales tax. Minimum order of \$10.00 or a \$2.00 handling charge will be added to order.

All prices include handling and return postage. Prices are subject to change without notice. Prices are valid only for shipments within the Continental United States. Please allow 4-6 weeks for delivery

To avoid delays, please print clearly, We must have a street address, as UPS cannot deliver to a P.O. box.

For information on other Conair® haircut kit parts call: 1-800-3-CONAIR.

NAME	
ADDRESS	APT
CITY	STATEZIP

(We call only if we have a question about your order.)

Conair Corporation Service Department 150 Milford Road East Windsor, NJ 08520-9730

Battery Operated Instructions for Care and Use

limitaciones mencionadas pueden no regir

citicos y usted puede tener otros derechos que **SONA 200 30 ADATIMIL AITNARAD** Esta garantía le otorga derechos legales espe-

BEARD & MUSTACHE TRIMMER

FORMEN" **Model GMT7CS**